VanGlaze


EXTERIOR ACCESSORIES

Sidebar fitting guide

Parts checklist and fitting instructions

01 Check your kit

Lay out all parts before fitting. The reference numbers below match the assembly diagram on page 2.

REF.	COMPONENT	SIZE	QTY.	IDENTIFICATION
1	Hex-head bolt	M10 x 35	4	
2	Spring washer	D8	8	
3	Large flat washer	D8	8	
4	Hex nut	M8	8	
5	Spring washer	D10	4	
6	Large flat washer	D10	4	
7	T-bolt	-	8	
8	PVC retaining plate	-	8	
9	Sidebar	-	2	
10	Bracket 1 - left	-	1	
11	Bracket 1 - right	-	1	
12	Bracket 2 - left	-	1	
13	Bracket 2 - right	-	1	


Quantities are for a complete pair. Original vehicle fittings are not included in this parts list. D8 / D10 are the washer size references supplied with the kit.

Damage caused by incorrect installation or misuse is not covered by the product warranty.

Missing a part? Contact us before fitting: **info@vanglaze.uk** | **01455 243388**

02 Assembly & fitting

Cylindrical bars are illustrated. Bar profile, finish and length may vary; the shared fitting method is the same.

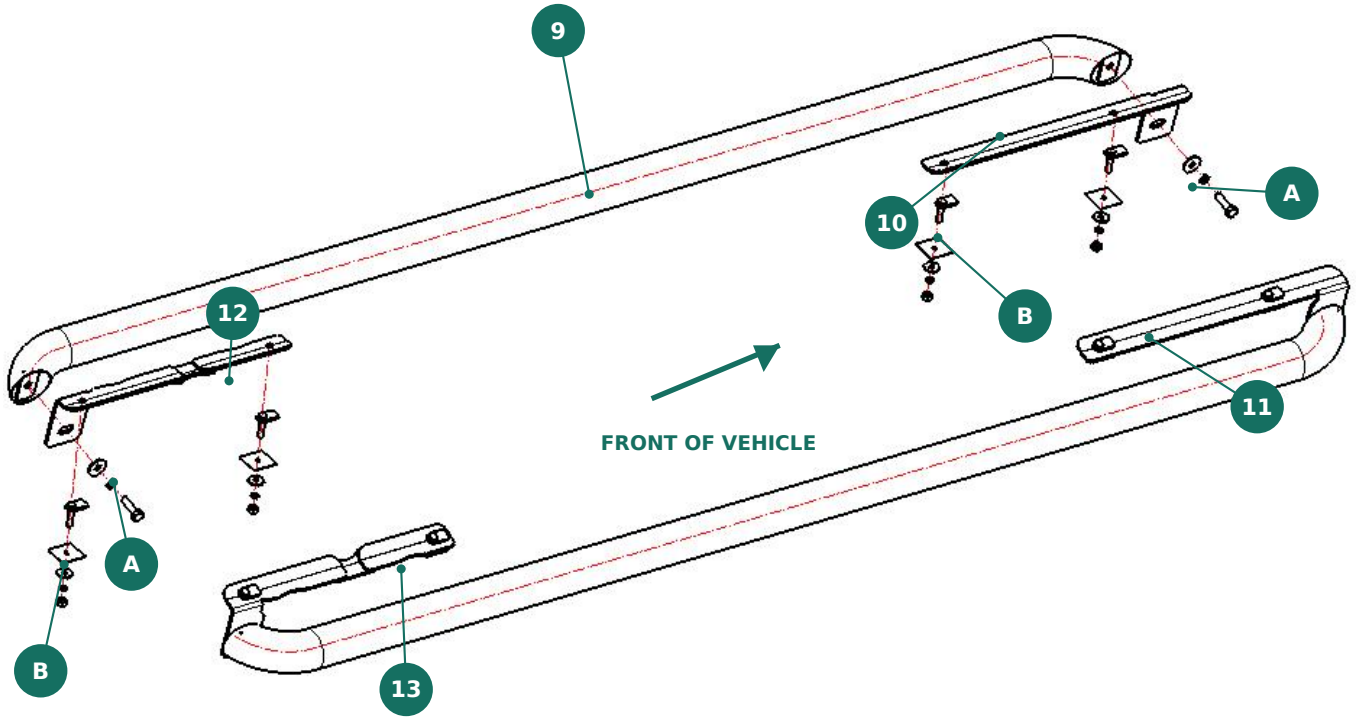

A **Bar-to-bracket fixings**

1 Bolt 5 Spring washer 6 Flat washer

B **Bracket mounting fixings**

2 / 3 Washers 4 Nut 7 T-bolt 8 PVC plate

1 Check and prepare

Confirm that the bars are correct for your vehicle and wheelbase. Check every part against page 1 and identify the left and right brackets.

2 Assemble and secure

Use the diagram to position the brackets and fit the supplied fixings. Check the bar alignment before fully securing all connections.

3 Check before driving

Check that no fixings are missing and that both bars and all brackets are secure. Recheck the fixings regularly during use.

Fit safely. Never work under a vehicle supported only by a jack. If the kit or mounting points do not match, stop and contact us. Tightening torques are not specified in the supplied instructions; ask VanGlaze before final tightening if unsure.